



# RCU9200

---

## WIRED REMOTE

---



INSTRUCTION MANUAL

## CONTENTS

CONTROLS .....	3
INSTALLATION .....	4
Mounting .....	4
Wiring .....	4
Operation .....	5
Power .....	5
Mute .....	5
Mode .....	5
MOUNTING DIAGRAM .....	6
INSTALLATION DIAGRAM .....	7
STANDARD COMMUNICATIONS	
CONTRACT WARRANTY .....	8
CUTTING TEMPLATE .....	11

## CONTROLS



1. Power

2. LCD Window

3. Mute

4. Fast Forward/Tune

5. Volume Up

6. Volume Down

7. Rewind/Tune

8. Mode

## INSTALLATION.

### **MOUNTING.**

The RCU9200 is designed to be panel mounted. The mounting assembly supports mounting into panels of up to 10 mm thick. Before mounting, the RCU9200 requires a hole of 76 mm to be cut in the panel.

Using the supplied template (page 11) mark the location of the hole to be cut. Make sure there is at least 60 mm of clearance behind the panel to allow for the depth of the remote unit and its cables. There should also be at least another 10 mm clearance around the hole for the front panel fascia and the U-Bracket mounting clamp.

Cut the 76 mm hole using a hole saw or similar.

Mount the RCU9200 through the hole from the front of the panel. Ensure the rubber gasket is between the front fascia and the mounting surface.

Remove the two top nuts from the two bolts on the rear of the unit.

DO NOT remove the two bottom nuts as these are required to hold the bolts in place.

Slide the U-Bracket over the bolts ensuring the clearance slots in the bracket are positioned as shown. Slide the bracket forward until it presses against the rear of the mounting surface.

Refit the two nuts and tighten. Do NOT over tighten otherwise damage to the rear of the RCU9200 case may occur.

### **WIRING**

Connect the attached fly lead to one of the two in-line connectors at the rear of the GR9200. If required the cable can be extended using one or more optional LE024 5 meter extension leads (up to a maximum of 15 meters).

The single terminal pin on the rear of the case is used to activate the back lighting for the RCU9200 display and keypad. Connect this to a +12 V DC source using an insulated spade connector (to prevent the terminal shorting to the U-Bracket). Connecting

this to an accessory point in your vessel will ensure the back lighting turns on and off with your vessels accessory switch.

## **OPERATION**

---

The RCU9200 duplicates most of the functions of the main GR9200 radio panel.

## **POWER**

---

Press and hold the **Power** button to turn the GR9200 ON or OFF.

Briefly press the **Power** button to adjust the display brightness on the GR9200.

## **MUTE**

---

Press the **MUTE** button to mute the sound. Press again to restore the previous volume settings.

## **MODE**

---

The **MOD** button switches between the various signal sources such as Tuner, AUX input or CD player. If an SD card or USB memory stick is fitted these will be included in the list of available Modes.

## **◀◀ Rewind/ Tune**

---

In Tuner mode, briefly press **◀◀** to manually tune downwards in frequency. Press and HOLD **◀◀** to scan downwards in frequency. Scanning will stop when a station is found.

When playing a CD or MP3, press **◀◀** to step to the beginning of the current track. Press **◀◀** again to skip to the previous track. Press and HOLD **◀◀** to rewind through the current track.

## **▶▶ Fast Forward**

---

In Tuner mode, briefly press **▶▶** to manually tune upwards in frequency. Press and HOLD **▶▶** to scan upwards in frequency. Scanning will stop when a station is found.


When playing a CD or MP3, press **▶▶** to advance to the next track. Press and HOLD **▶▶** to fast forward through the Current track

## **▲ ▼ UP OR DOWN**


---

Press **▲** to increase the volume or **▼** to decrease the volume.

## MOUNTING DIAGRAM

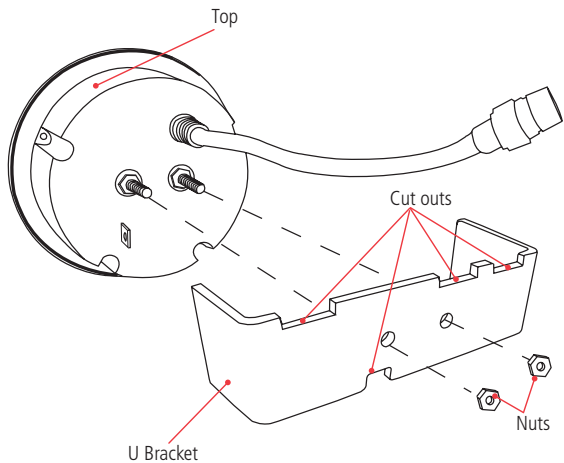

## INSTALLATION DIAGRAM

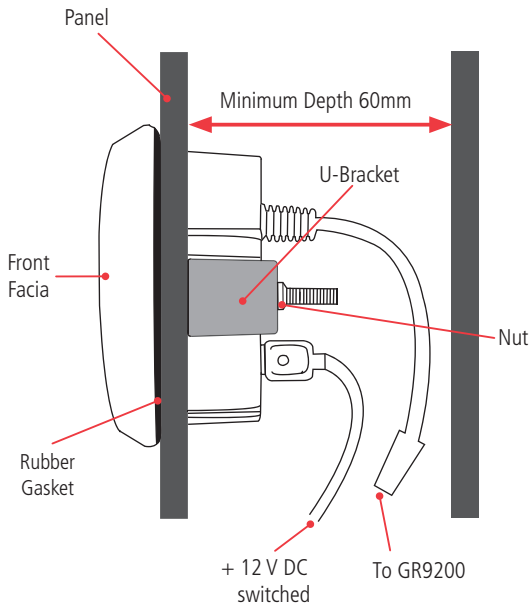

# STANDARD COMMUNICATIONS CONTRACT WARRANTY

## I. STATUTORY WARRANTIES

---

- 1.1 The Trade Practices Act Part V, Division 2A and other legislation imply conditions, warranties and other obligations on us to consumers that cannot be excluded, restricted or modified. Those provisions apply to the extent required by law.
- 1.2 We exclude all other conditions, warranties and obligations which would otherwise be implied concerning the activities covered by this agreement.
- 1.3 We limit our liability where we are allowed to do so. Examples of where we are allowed to limit liability are -
  - (a) you acquire goods from us for re-supply;
  - (b) the goods or services we supply are not of a kind ordinarily acquired for personal, domestic or household use or consumption.
- 1.4 Where we are allowed to limit our liability, to the extent permitted by law, our sole liability for breach of a condition, warranty or other obligation implied by law is limited.
  - (a) in the case of goods we supply, to any one of the following as we decide -
    - (i) the replacement of the goods or the supply of equivalent goods;
    - (ii) the repair of the goods;
    - (iii) the payment of the cost of repairing the goods or of acquiring equivalent goods;
    - (iv) the payment of the cost of having the goods

repaired; or

- (b) in the case of services we supply, to any one of the following as we decide -
  - (i) the supplying of the services again;
  - (ii) the payment of the cost of having the services supplied again.

## 2. ADDITIONAL WARRANTIES

---

- 2.1 The warranties in this clause are in addition to the statutory warranties referred to in the previous clause.
- 2.2 We warrant our goods to be free from defects in materials and workmanship for one year from the date of original sale (or another period we agree to in writing). During this period and as our sole liability to you under this warranty, we agree to, at our option, either repair or replace goods which we are satisfied are defective. We warrant replacement parts for the remainder of the period of warranty for the goods into which they are incorporated.
- 2.3 We warrant our other repairs to be free from defects in materials and workmanship for three months from the date of the original repair. During this period and as our sole liability to you for the repair, we agree to repair or replace (at our option) repaired goods which we are satisfied are defective.
- 2.4 We warrant that we will perform services with reasonable care and skill and agree to investigate any complaint made in good faith that we have performed services unsatisfactorily. If we are satisfied that the complaint is justified, and as



### **3. OTHER LIMITATIONS**

---

- 3.1 You may not rely on any representation, warranty or other provision by or for us which is not covered by clause [ 1 ] or repeated in this agreement in clear terms.
- 3.2 We are not liable (nor are our employees, contractors and agents) for any damage, economic loss or loss of profits whether direct, indirect, general, special or consequential -
- (a) arising out of any breach of any implied or express term, condition or warranty; or
  - (b) suffered as a result of our negligence (or that of our employees, contractors or agents) apart from liability as set out in the previous two clauses.
- 3.3 The liability of a party under this agreement (whether arising in contract, tort or by statute) is to be reduced by the same proportion as represents the proportion of the loss or damage caused or contributed to by the other party, its contractors or agents.



A Division of **Standard Communications Pty. Ltd.**

Head Office:

**SYDNEY**

**Locked Bag 2086, North Ryde, NSW 1670, Australia.**

**T: +61 (0)2 9844 6666 F: +61 (0)2 9844 6600**

**Branches:**

**MELBOURNE**

7 Micro Circuit,  
DANDENONG STH 3165.

T: (03) 9798 0988

F: (03) 9798 0177

**ADELAIDE**

Unit 1, 14 Phillips St.,  
THEBARTON 5031.

T: (08) 8234 2633

F: (08) 8234 5138

**PERTH**

Unit 1, 10-12 Harvard Way,  
CANNING VALE 6155.

T: (08) 9455 5744

F: (08) 9455 3110

**BRISBANE**

Unit 1, 89-101 Factory Rd.,  
OXLEY 4075.

T: (07) 3278 6444

F: (07) 3278 6555

**SYDNEY**

Unit B, 22-24 College St.,  
GLADESVILLE 2111.

T: (02) 9879 8888

F: (02) 9816 4722

**AUCKLAND**

Unit 2/24 Bishop Dunn Place,  
East Tamaki, MANUKAU 2013 NZ.

T: (09) 274 0955

F: (09) 274 0959

For customers outside Australia and New Zealand please contact your local GME retailer  
or email: [export@gme.net.au](mailto:export@gme.net.au)

Tear off here

## CUTTING TEMPLATE

Outer edge of wired remote  
(Push out)

Mounting hole (Push out)

76mm

90mm

# CUTTING TEMPLATE